











Next place a screwdriver between the thermostat housing & EGR Cooler pipe & lever it sideways.(Cont)



Lever EGR Cooler sideways so you can slip in the EGR Blanking Plate



For easier fitment the plate should have 1 corner cut off it and the opposite side filed down slightly so it slides past the bolts.

Tighten all in reverse order.

NB: There is no need to use gaskets or sealants.

DO NOT LEVER THE COOLER TOO HARD AS YOU CAN EASILY CRACK THE WELDS INSIDE. JUST GO EASY.



www.chiptuning.com.au sales@chiptuning.com.au